


SHAD

DUCATI MONSTER 1200 / 797 '16-'19 SUPERSPORT 937 '16-'19 SIDE BAG HOLDER DOMN17SE



1 262198 x1




2 261029 x2
Ø20 Ø10 x 15



3 303045 x10
Ø8



4 304169 x2
M8 x 50 Din 7380

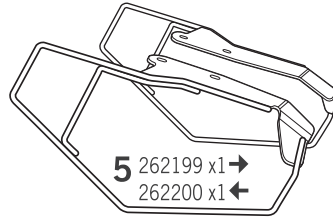

5 262199 x1 →
262200 x1 ←



6 304028 x4
M8 x 25 Din 7380



7 302024 x4
M8

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the Top Master system before the Side Bag Holder.

